


Water spray valve



This valve is designed to control spraying. It ensures that the hydraulic medium and spray water are kept separate. The supply for spraying the water is connected to "PW", the spray jets to "O" (out) and the control lines to "PZ". The valve does not require a main cartridge in the marco block. The main cartridge can be replaced by a "blind" cartridge. The water spray valve can be controlled directly from the pilot valve. The water spray valve should not be used as a pilot operated check valve as it has no connection for relief valves. The valve's flow rate can be controlled by fitting an adjustable orifice in the connection PW.

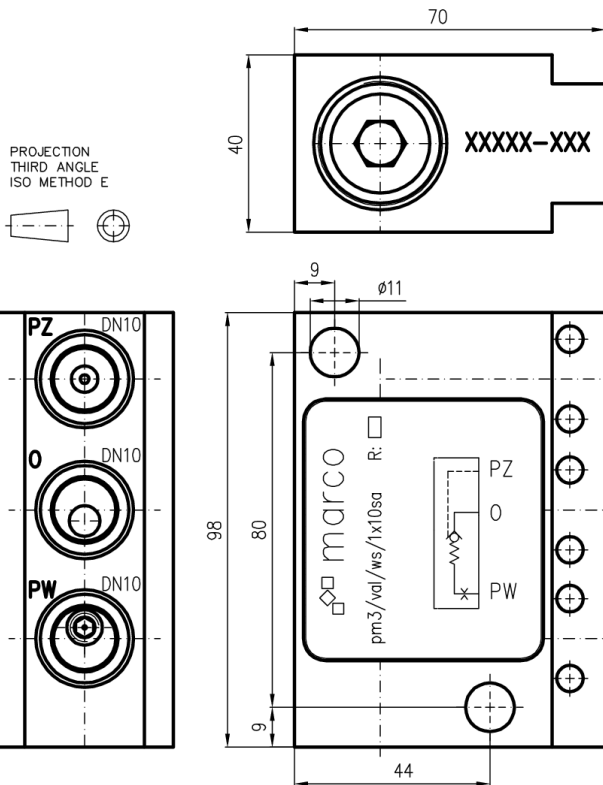

pm3/val/ws/1x10sa

Order number	Description
pm3/val/ws/1x10sa	Water spray valve